

28.02.2012

XCT Update

BV 3.33 to BV 3.50 only for **XC-Trainer** and **XC-TrainerDual**

PS 3.33 to PS 3.50 only for **XC-TrainerPro**

EV 3.33 to EV 3.51 only for **XC-Trainer3DG** until serial no.7999

ES 3.33 to ES 4.51 only for **XC-Trainer3DG** up serial no.8000

1. Netto Vario acoustics

Additional acoustics in descent from 0.0 to -1.5m/sec.

Big advantage:

One can see already rising air masses although it is still falling.

MENU / SETTINGS / VARIO / NETTO from 0.0 -1.5m/sec


daaah-dit with more sinking daaah becoming longer.

Netto adjustment = 0.0 m / s -> no sound netto

If SINKTON = N no netto sound

If SINKTON is set higher, for example -0.8 M / s,

then SINKTON has priority, as is netto sound to -0.7.

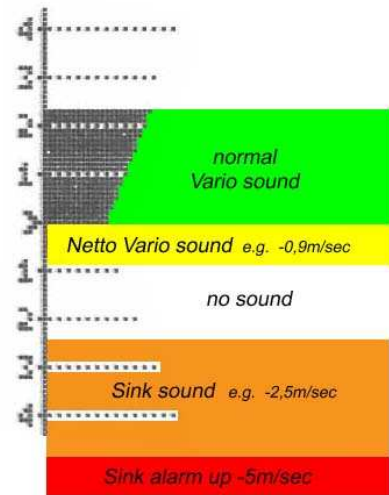

2. Selection for altitude display between GPS altitude or flight level

Appears in MAP / CENTER / BARO left, where formerly TAS display.

If selected, TAS-display at the left of the altitude, so a line lower than before.

The advantage is that any indicator is always on a firm course.

Altitude selection in GENERAL- menu:

NO AGPS / FL No additional height indicator

HEIGHT-GPS display of GPS altitude if 3D

FLGT LEVEL FL-display e.g. FL 105

AGPS <-> FL alternating display of 1 second

3. Speed sensor calibration

SETTINGS / GENERAL / FLIGHT CAL-100

Multiplier for speed sensor 75% ... 100% .. 125% adjustable.

4. G-Sensor calibration only for XC-Trainer3DG

MENU / ACCELER. / NULLING

X/Y axis: XC-Trainer lay flat on the table - if value then press calm XY button.



Z axis: XC-Trainer edgestitch put on the table - if value then press the Z button calm.

